

ScreedPro FibreFlex

A premium, fibre reinforced, flexible, self smoothing and self levelling, fast setting compound which can be laid up to 50mm in one single application providing an even base for installations.



Features*

- 2mm – 50mm depth
- Highly flexible
- Foot traffic 2 hours
- Rapid setting
- Dries in 24 hours
- Pumpable
- Protein free
- Shrinkage compensated
- Fix ceramics 4 hours at 20°
- Unbonded floorcoverings from 8 hours
- Bonded floorcoverings from 24 hours
- CT – C30 – F7
- 20kg

* at 20°C and 5mm thickness



2 hour
foot traffic



protein
free



internal



flexible



under-floor
heating



pumpable
screed



working time
20 - 30mins



lifetime
guarantee

The compound shall be ScreedPro FibreFlex as manufactured by N&C Building Products Limited, 41-51 Freshwater Road, Chadwell Heath, Romford, Essex, RM8 1SP, England. Tel: 020 8586 4600 and shall be applied strictly in accordance with the manufacturer's current data sheets and instructions.





British Standard - Guidelines

All aspects of the installation must be in accordance with the requirements of BS 8204, BS 8203 (Installation of Resilient Floorcoverings) or BS5325 (Installation of Textile floor coverings). Complies with EN standards and supplementary specifications.

Description

ScreedPro FibreFlex is a technically advanced fibre reinforced smoothing and levelling compound that is designed to rapidly smooth and level existing substrates including timber prior to applying a floor finish.

ScreedPro FibreFlex can be used in domestic, commercial and light industrial areas, being protein free, the product can be used in biologically sensitive areas, ideal for use in hospitals, laboratories, food preparation areas, food shops, restaurants, schools, care homes etc.

ScreedPro FibreFlex can be used over Damp Proof Membranes. Apply the first coat of DPM and allow to dry and then apply a second coat. Whilst this is still wet broadcast 1.2mm kiln dried quartz directly over the DPM and allow to dry. Brush off any loose particles before laying the ScreedPro FibreFlex. For best results apply ScreedPro FibreFlex at minimum 3mm thick.

Mixing

Add 4.0 – 4.5 litres of clean water in to a clean suitable container.

The powder should be added at a steady rate, while stirring continuously using a variable speed mechanical mixer. The material should be mixed until a smooth lump free consistency is achieved. For larger areas or greater thicknesses an appropriate mixing pump is more suitable.

Application

Pour the blended ScreedPro FibreFlex onto the prepared sub-floor and spread in to place.

Above 3mm thickness, the mixture will self-level and self-smooth during application. From feather edge to 3mm, trowel apply as a conventional smoothing underlayment.

Where it is necessary to contain Screedpro FibreFlex, such as day work joints or edges of movement joints, wooden laths or similar should be used as flow-stops.

For greater thicknesses apply further layers after the previous one has set, first removing any laitance that may have occurred. All layers must be of a similar depth.

Priming is required between layers.

How much material?

Applied Thickness	Approximate Coverage Per Bag	Consumption Per 100m ² Area	Aggregate
3mm	4m ²	25 bags	n/a
15mm	0.8m ²	125 bags	n/a

The table should be used for guidance purposes only and all information given can be affected by the substrate texture and absorbency. The coverage given is based on a smooth non absorbent subfloor.

Substrates

Concrete & Sand/Cement Screeds

Concrete and sand/cement screeds must be dry and any laitance or surface treatments removed.

Sand/Cement screeds must have a moisture reading of less than 75% RH before work can begin.

Allow approximately 1 day per mm for drying of new screeds. It is also advised to prime sand/cement screeds to maintain a good flow and prevent air bubbles rising to the surface.

Porous surfaces may need more than one coat. Prime with Nicobond Primer diluted at 4 parts water to 1 part Nicobond Primer.

Power Floated Concrete

The surface should have been allowed to dry for at least six weeks. Power Floated Concrete can have a loose top layer and in some cases laitance once it has dried.

Mechanically remove any laitance or surface treatments. All dust and debris must be removed using a vacuum.

Ceramic, Quarry & Porcelain Tiles

The surface must be clean, dry, secure and free from dirt and dust.

Use ScreedPro Feather Finish to fill in the grout joints to make the surface level prior to priming and applying ScreedPro FibreFlex.

Under-floor Heating

Under-floor heating must be switched off 48 hours before and after application. When switching on start with a low temperature, gradually increasing it to its operating temperature at a rate of 5° C per day.

Under-tile Heating

Use ScreedPro FibreFlex to encapsulate undertile heating systems over plywood up to a maximum of 10mm.

Flooring Grade Asphalt

The surface must be clean, secure and free from dirt and dust. A minimum application of 3mm (maximum 6mm) of ScreedPro FibreFlex will be required.

Vinyl Tiles

Existing hard vinyl tiles must be secure and adhered to the sand/cement or concrete substrate to which the vinyl tiles was originally applied. The surface must be clean, secure and free from dirt and dust.

Floorboards and T/G boarding

Tongue and groove boards must be screwed down to the joists every 150mm to provide a rigid and flat surface.

Ensure the substrate is strong enough to support the leveller, adhesive and final floorcovering. Ensure there is sufficient ventilation beneath the substrate.

Plywood Overlays

The plywood must be 5.5mm or thicker screwed/ring nailed at 150mm centres in the middle (grid style) and 100mm centres around the edges.

Use ScreedPro Feather Finish to fill in the joints etc prior to applying ScreedPro FibreFlex.



Substrates

Metal Surfaces

The surface must be clean, dry, secure and free from dirt and dust. Use ScreedPro Feather Finish to fill in any joints to make the surface level prior to priming and applying ScreedPro FibreFlex.

Priming

Priming is always required. See table below.

Surface	Primer
Porous Substrates	Nicobond Primer (diluted 1:4 with water)
Non Porous Substrates	Nicobond Primer (use neat - undiluted)
Calcium Sulphate Screeds	Consult Technical Support

Technical Information

Specification	ScreedPro FibreFlex
BS EN 13813 Classification	CT-C30-F7
Application Thickness	
Unfilled	2mm to 50mm
Filled	Consult Technical Support
Working Life @ 20° C	20-30 minutes
Walk on time @ 20° C	2 hours
At 3mm thickness ready for Ceramic Tiles	4 hours
Resilient floor coverings / LVT (Dependent on thickness)	Approx 8 hours loose lay Approx 24 hours bonded
Application over non-absorbent surfaces	Allow 24 hours (in good drying conditions)
Installation Temperature	Minimum 5°C
Compressive Strength N/mm ² (BS EN 13892-2)	
1 Day	> 15.0
7 Days	> 23.0
28 Days	> 35.0
Flexural Strength N/mm ² (BS EN 13892-2)	
1 Day	> 3.0
7 Days	> 5.0
28 Days	> 7.0
Packaging	20kg bag

Technical Terms & Definitions

Porous (Permeable & Absorbent)

Porous surfaces are any materials having minute or narrow spaces through which liquid or air may pass. Examples of porous materials are quarry tiles (unsealed), unvarnished (unfinished) wood, concrete (not power floated), sand /cement screeds.

Non Porous (Impermeable & Non Absorbent)

Non porous surfaces tend to be thick, dense, and solid so that nothing can penetrate beyond its outer-most surface. Examples of non porous surfaces are metal objects, varnished wood, laminate counters, granite, powered floated concrete, glazed ceramic tiles, porcelain tiles, flooring grade asphalt, quarry tiles (sealed) and vinyl. See notes on the use of Nicobond DPM One Coat membrane.

Fast Setting Screeds

Allow a faster setting time to achieve foot traffic within a shorter period. Such products may still require 12-24 hours to dry out completely (depending on thickness).

Fast Drying Screeds

Allow for the quicker installation of floorcoverings. Such products may be dry with in 4-6 hours (depending on thickness).

Tools

Suitable steel smoothing trowel, spiked roller, mixing bucket, electric drill, powder whisk or suitable pumping machine.

Cleaning

Wash tools thoroughly with water immediately after use.

Shelf Life

6 months in unopened bags from the date of packing.

Storage


This product must be stored clear of the ground, under dry conditions, out of direct sunlight. Protect from frost. If allowed to freeze N&C Building Products cannot guarantee the performance of the product.

Health & Safety Advice

ScreedPro FibreFlex powder is classified under the Chemicals (Hazard Information and Packaging for Supply) Regulations.

The relevant Material Safety Data Sheet can be obtained from the website or directly from N&C Building Products Ltd at the address below.

N & C Building Products Limited
 41-51 Freshwater Road
 Chadwell Heath
 Romford
 Essex RM8 1SP
 Tel: 020 8586 4600
 Fax: 020 8586 4646
 Email: info@nichollsandclarke.com
 Web: www.ncnicobond.com

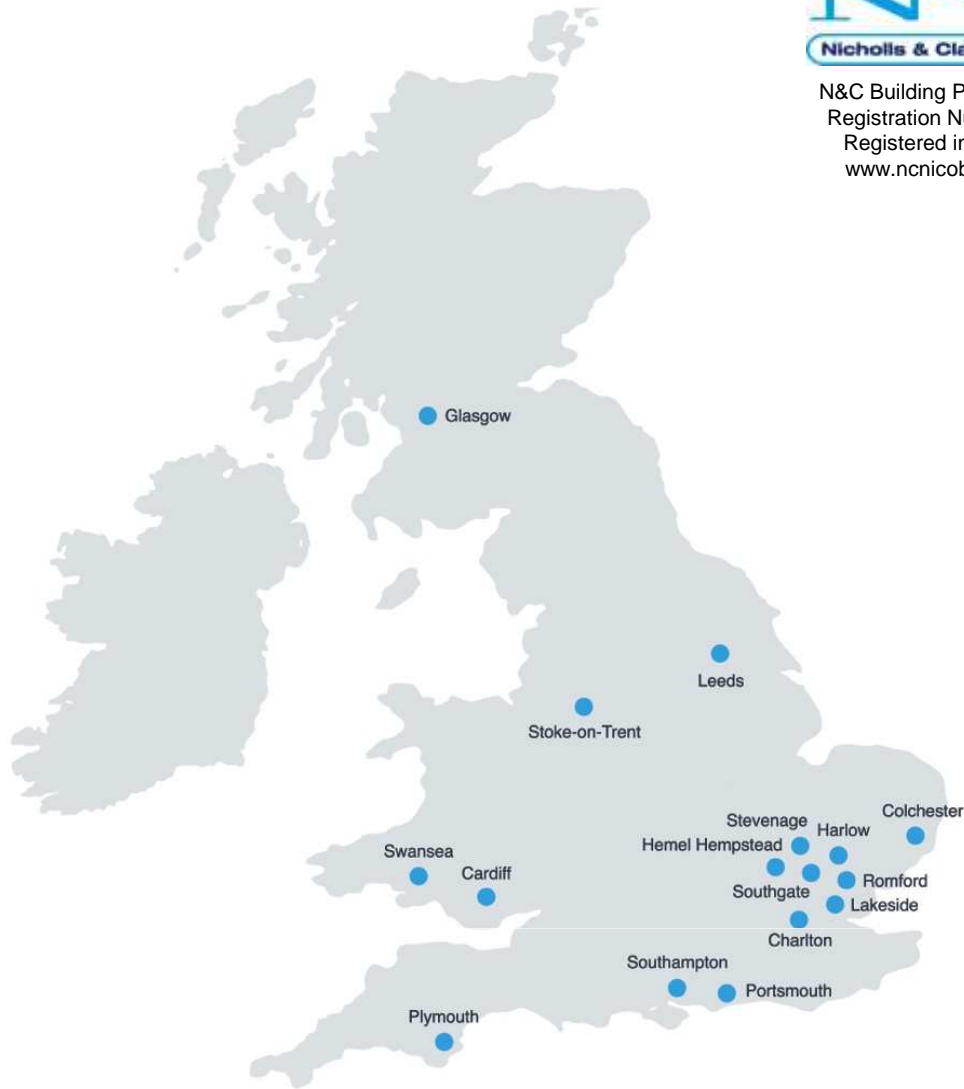

Distribution Centres, Trade Counters & Showrooms

N&C Building Materials
 41 - 51 Freshwater Road
 Chadwell Heath,
 Romford Essex RM8 1SP
 Tel: 020 8586 4600
 Fax: 020 8586 4646

C1 Cothill Trading Estate
 Plympton
 Plymouth PL7 1SR
 Tel: 01752 339724
 Fax: 01752 342746

B1 - B3 Sneyd Trading Estate
 Sneyd Hill, Burslem
 Stoke on Trent ST6 2PA
 Tel: 01782 575727
 Fax: 01782 575641

26 Colquhoun Avenue
 Hillington
 Glasgow G52 4BN
 Tel: 0141 880 1200
 Fax: 0141 880 1212

4 Waterloo Industrial Estate
 Flanders Road
 Hedge End
 Southampton SO30 2QT
 Tel: 01489 779700
 Fax: 01489 779701

3 - 4 Cardiff Trade Park
 Hadfield Road
 Cardiff CF11 8AQ
 Tel: 02920 390146
 Fax: 02920 224356

2 City Park Industrial Estate
 Gelderd Road
 Leeds LS12 6DR
 Tel: 0113 224 4630
 Fax: 0113 224 4631

Trade Counters & Showrooms

1A - 1B Alexander Place
 Lower Park Road
 New Southgate
 London N11 1QD
 Tel: 020 8361 6050
 Fax: 020 8361 4757

14 Meridian Trading Estate
 Bugsby Way, Charlton
 London SE7 7SJ
 Tel: 020 8269 5960
 Fax: 020 8269 5961

Units 10 - 11, 14 - 15
 Advent Way, Edmonton
 London N18 3AF
 Tel: 020 8586 4600
 Fax: 020 8586 4646

8 Ascent Park
 Edinburgh Way,
 Harlow Essex CM20 2HW
 Tel: 01279 621980
 Fax: 01279 621981

1 Cliffside Trade Park
 Motherwell Way,
 Lakeside, West Thurrock
 Essex RM20 3XD
 Tel: 01708 680180
 Fax: 01708 680181

2 - 5 Albarn Close
 Wyncolls Road
 Severalls Park, Colchester
 Essex CO4 9HY
 Tel: 01206 844 161
 Fax: 01206 845 878

9 - 11 McDonalds
 Business Park, Maylands
 Hemel Hempstead
 Hertfordshire HP2 7EB
 Tel: 0845 2606 025
 Fax: 0845 2606 026

16 Arlington Business Park
 Whittle Way, Stevenage
 Hertfordshire SG1 2BD
 Tel: 01206 849 322
 Fax: 01438 740 338

8D Pompey Centre, Fratton Way
 Southsea, Portsmouth PO4 8TA
 Tel: 02392 894599
 Fax: 02392 894598

5 Tower Court, St David's Road
 Swansea Enterprise Park
 Swansea SA6 8RU
 Tel: 01792 797337
 Fax: 01792 774019

Nicholls & Clarke

— Est 1875 —